





1. Unplug Center Module and move to a location with adequate workspace.




2. Remove (2) screws from each side and (4) from the rear enclosure.

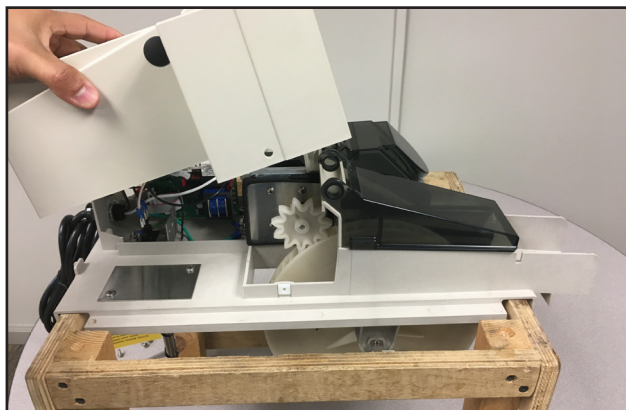


3. Lift cover up to remove.

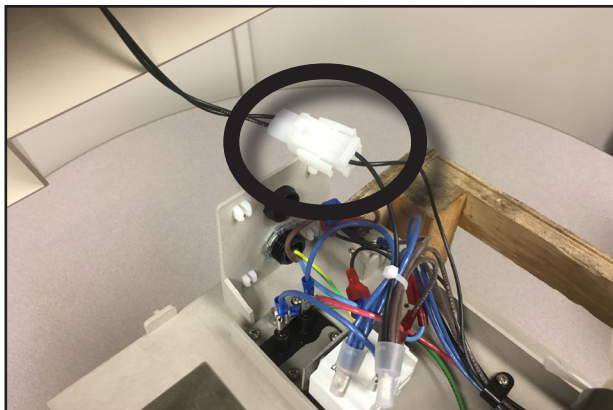


4. Unplug jog switch if equipped.

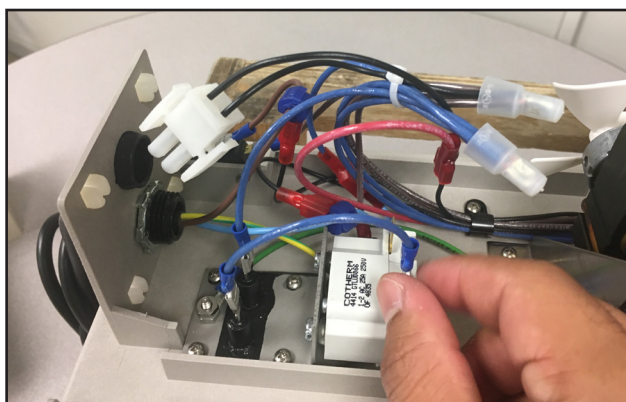


5. Remove jumper wire from Thermostat and Heater. (This wire may be blue or white.)

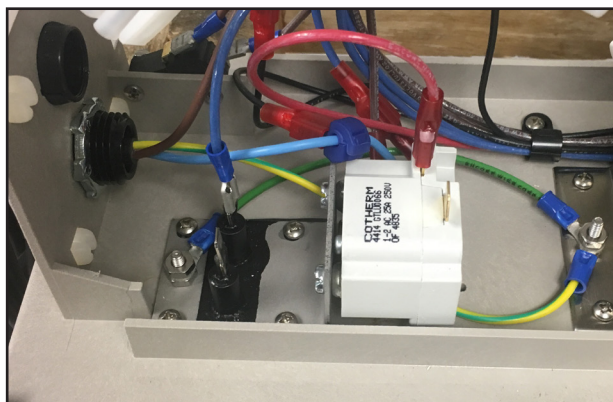


6. Heater and Thermostat should look like image above.

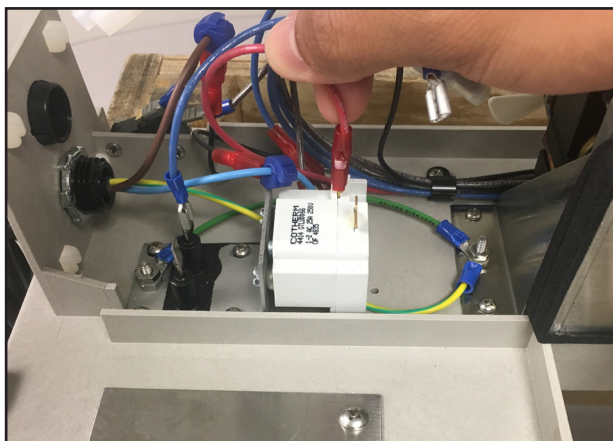

7. Unplug Red wire from Thermostat.

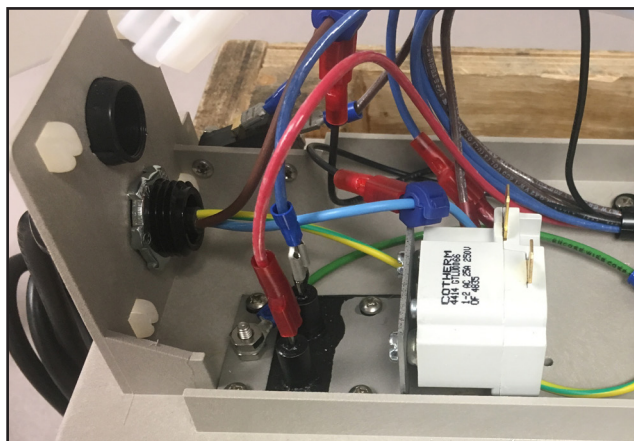

8. Connect the Red wire to the heater as illustrated above.

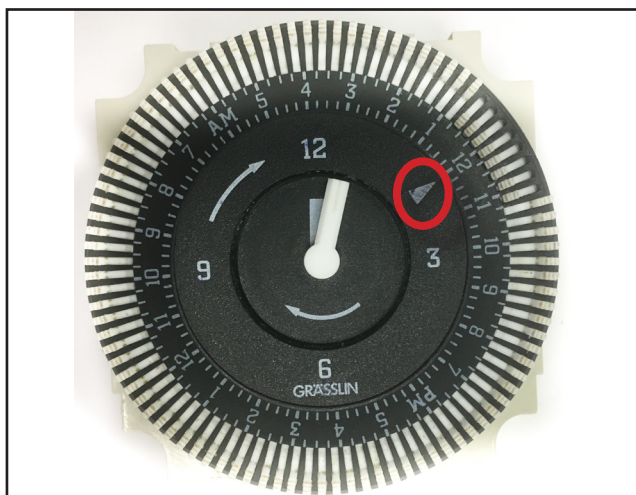

9. Connect the unit to a power source and pull the outer white tabs to the middle, on the time of day arrow. (Arrow is circled in red in image above).

10. If your heater starts warming up then your thermostat needs to be replaced. If your heater does not get warm then you will need to replace the heater.

11. Once diagnose has been made, please reconnect heater cable and jumper back to original position.



12. Replace rear cover and secure with screws.